



For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
8 Cherry Tree Rd, Chinnor
Oxon OX9 4QY
Tel: 01844-351694 Fax: 01844-352554
Email: enquiries@mauritron.co.uk

'STEREO 60' POWER AMPLIFIER

INSTALLATION • OPERATION • MAINTENANCE

OPERATION

1. The 'STEREO 60' may be fed from the 'VARISLOPE 2 STEREO' pre-amplifier or from any other suitable source. The LEAK pre-amplifier is supplied with a grey or brown multiple cable terminating in an octal plug which fits the socket on the 'STEREO 60' marked 'PRE-AMP' and automatically makes the input connections. In this case the input 'GAIN' switch must be set to 'HI', when an input of 125mV r.m.s. will give a power output of 30 watts.
2. When the 'STEREO 60' is fed from a self-powered American type pre-amplifier the output connections should be taken via two screened co-axial cables to the plugs fitting the sockets marked 'INPUT L' and 'INPUT R'. In this case the input 'GAIN' switch should be set to 'LO', when an input of 1 volt r.m.s. will give a power output of 30 watts. The input impedance of the amplifier in this condition is 200,000 ohms.


INSTALLATION

3. Check that all valves (tubes) are correctly seated in their holders and that the markings on the valves correspond with those on the chassis adjacent to the holders. The amplifier will work equally well with any of the alternative valves.
4. The amplifier should stand on its base in a well-ventilated position. If placed in a case or cabinet, ventilation must be provided. Four fixing feet are fitted to the amplifier, and these raise the bottom of the amplifier and allow air to circulate freely.
5. On the British model the mains transformer is tapped for voltages of 205, 225 and 245 and the voltage selector plug on top of the mains transformer (see 'TOP CHASSIS' drawing) should be set appropriately. On the U.S.A. model the mains transformer is tapped for voltages of 110, 117 and 124 and the voltage selector plug should be set appropriately. The A.C. power supply should be connected to the two terminals nearest the guide key on the removable plug portion of the mains connector marked 'A.C. POWER'. In order that the amplifier may be remotely controlled we have provided two terminals marked 'SWITCH' underneath the mains transformer (see 'UNDER CHASSIS' drawing). The amplifiers leave our factory with a wire link joining the terminals. A remote switch may be run from the switch terminals, the switch flex being passed through the adjacent grommet marked 'SWITCH CABLE'. This flex should be knotted behind the grommet and the wire ends connected to the switch terminals—after removing the wire link. Most users will wish to employ the switch incorporated in the volume control of the 'VARISLOPE 2 STEREO' pre-amplifier, which is supplied with a plug and twin flex for this purpose. Full details are given on the installation sheets which accompany every pre-amplifier.
6. A double socket marked 'A.C. OUTLETS' is fitted as a convenient source of power supply for gramophone motors, self-powered radio tuners etc. The power taken from this socket should be limited to 100 watts or thereabouts. This socket is not fused but is controlled by the amplifier switch.
7. A connection to earth (ground) should be taken from the third terminal on the removable plug portion of the 'A.C. POWER' connector. This terminal is the one furthest away from the guide key and its corresponding terminal on the fixed portion of the connector is marked on the chassis by the symbol \perp . It is very bad practice to omit this connection, which may be made to the water system or to the steel conduit encasing the house wiring, providing that these systems themselves are properly grounded. To ensure freedom from hum (caused by 'earth loops') no other earth connection should be made.
8. The loudspeakers should be connected by twisted pairs of wires to the terminals marked 'LOUDSPEAKER L' and 'LOUDSPEAKER R'. It will be seen from the circuit drawing that one side of the loudspeaker winding is connected to the chassis, and no part of the loudspeaker wiring should be earthed elsewhere. The D.C. resistance of the connecting wires should be as low as possible, and not more than one-tenth the D.C. resistance of the loudspeaker. It is a bad practice to operate any power amplifier without a loudspeaker, and if it is desired to mute either loudspeaker by switching it out of circuit this should be accomplished by use of a changeover switch which replaces it with a resistor of corresponding value and rating. If for any reason only one loudspeaker is to be used then a similar resistor should be connected across the loudspeaker terminals of the amplifier channel not in use. The selector plugs on top of the output transformer (see 'TOP CHASSIS' drawing) should be adjusted for the nearest match to the advertised impedance of the loudspeakers.

9. Some users may wish to connect (as a temporary measure) a single channel LEAK pre-amplifier to the 'STEREO 60'. Under these circumstances the standard black multiple cable (supplied with the pre-amplifier) should be connected to the 'PRE-AMP' socket. The left-hand channel will be driven by this pre-amplifier and the right-hand channel should have a resistor of approximately 16 ohms ($\frac{1}{4}$ watt) connected across its loudspeaker terminals.


PHASING

10. It is vitally important that the diaphragms of your two loudspeakers move in phase, i.e. in the same direction at the same instant. To make sure of this note very carefully the following:—
- (i) If you are using identical loudspeakers (as you certainly should if you want true stereo) the manufacturer will doubtless have kept to a convention when marking the terminals, very often simply red and black. In this case the loudspeakers will be in phase when connected as shown below.

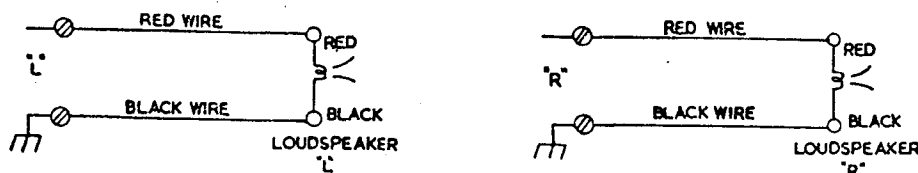

If your loudspeaker terminals are unmarked or you are using dissimilar loudspeakers you can check the phase as follows:— place the two loudspeakers as close together as possible; set the 'FUNCTION' switch to 'INPUT R' and the input selector to 'PICKUP'. Connect an unscreened length of wire (about 1-ft) to the 'PICKUP R' socket. Turn 'BASS' control to maximum and then turn up 'VOLUME' control until the hum picked up by the unscreened lead is fairly loud. Then reverse the leads to *one* loudspeaker; the condition which gives you noticeably more bass hum is the correct connection, i.e. the loudspeakers are in phase.


- (ii) Most unfortunately, some manufacturers of stereo records and tapes were inconsistent over phasing. We have stereo records containing several bands where the signals change phase from band to band! The same is even true of a Hi-Fi demonstration tape! If you have these earlier records and tapes you will need to fit an external switch to reverse the phase of one of the loudspeakers, as shown below. You will find, when you operate the phase-change switch rapidly, that the correct position is obvious on most records, though less obvious on others: this is due to a combination of musical content and recording techniques. When musical signals are out of phase you will generally have a loss of stereo effect, a deficiency in bass reproduction and a 'hole in the middle' (the sound appears to come from each loudspeaker with little sound apparently coming from the area between them). With a good stereo system, properly phased, there is no 'hole in the middle' effect.

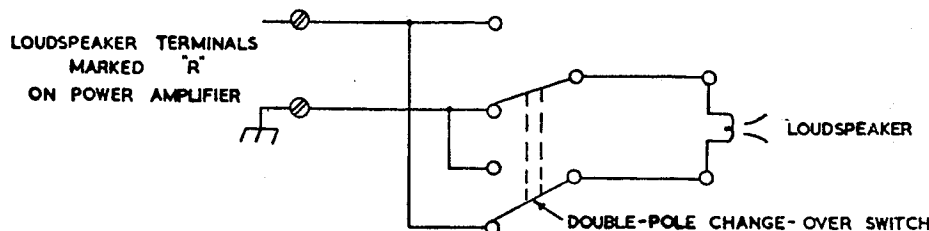


MAINTENANCE

11. The circuit diagram provides a qualified engineer with all information required for servicing. However, the following points may be of interest:—
- (a) The 'STEREO 60' does not depend upon the output valves (tubes) being matched pairs to give the stated performance, and if one output valve fails it is not necessary to replace both valves.
- (b) Should it ever be necessary to replace the reservoir capacitor C12 and C13 note that this must be of a type capable of handling a ripple current of 400mA.


For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd. Chinnor
 Oxon OX9 4QY
 Tel: 01844-351694 Fax: 01844-352554
 Email: enquiries@mauritron.co.uk

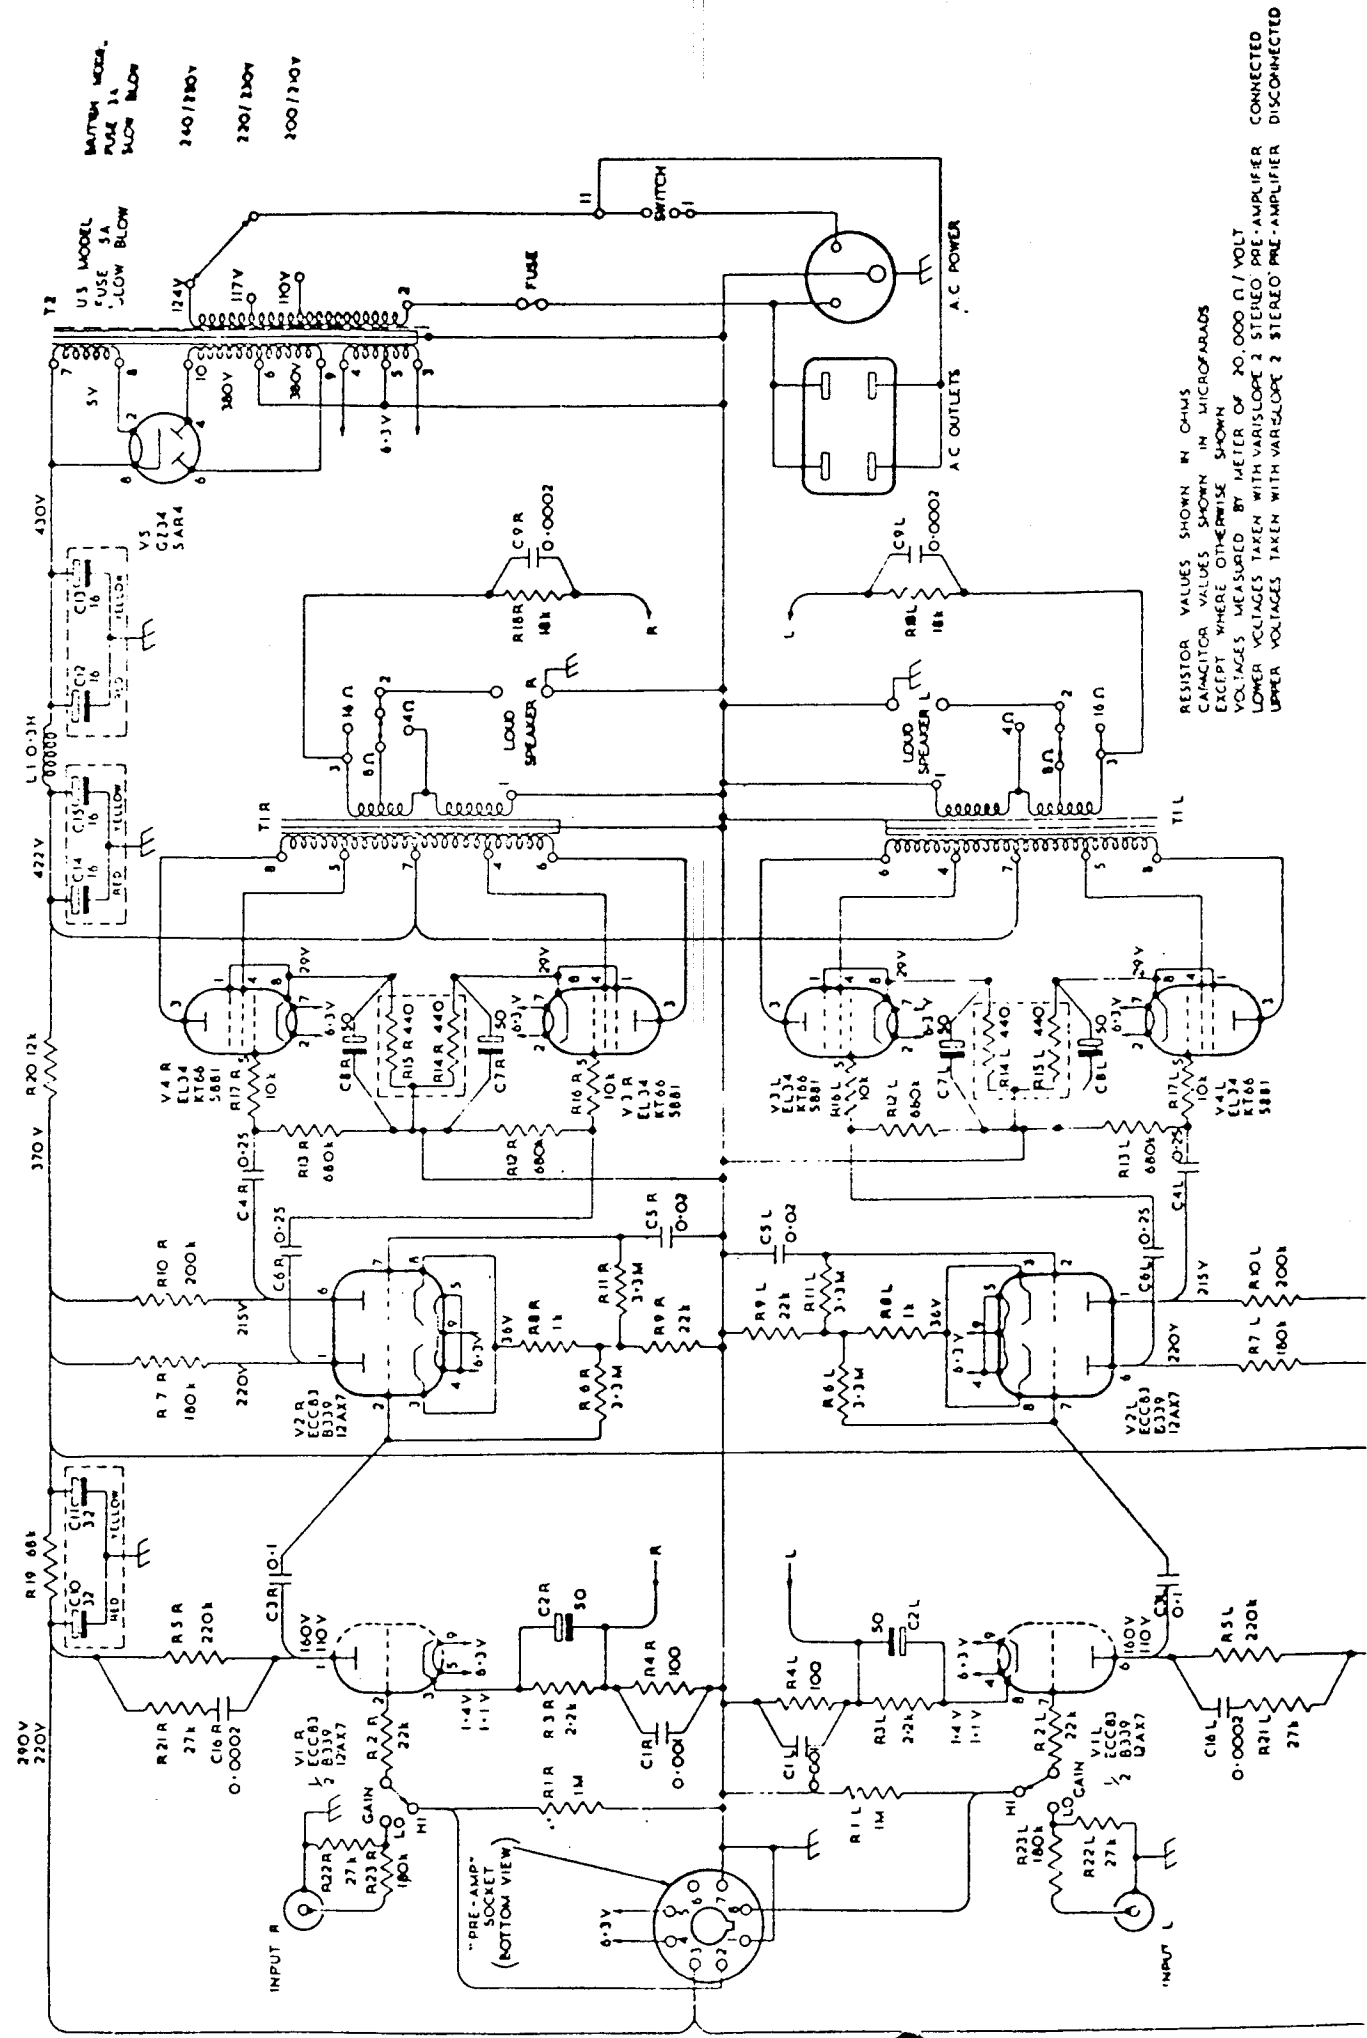



RESISTOR VALUES SHOWN IN OHMS
 CAPACITOR VALUES SHOWN IN MICROFARADS
 EXCEPT WHERE OTHERWISE SHOWN
 VOLTAGES MEASURED BY METER OF 20,000 Ω/VOLT
 LOWER VOLTAGES TAKEN WITH VARISCOPE 2 STEREO PRE-AMPLIFIER
 UPPER VOLTAGES TAKEN WITH VARISCOPE 2 STEREO PRE-AMPLIFIER CONNECTED

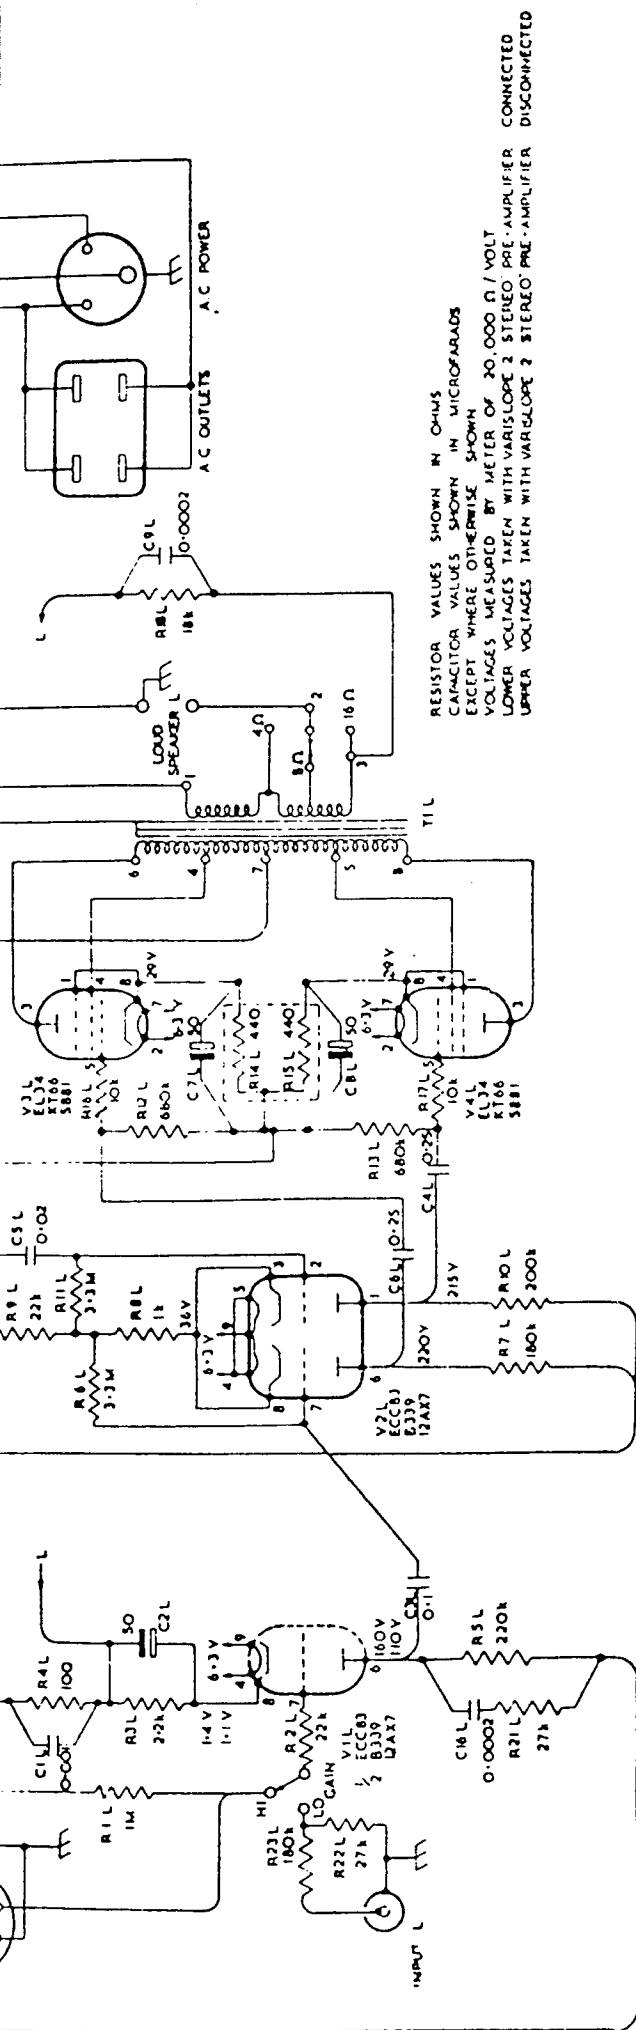

CIRCUIT DIAGRAM OF LEAK 'STEREO 60' POWER AMPLIFIER

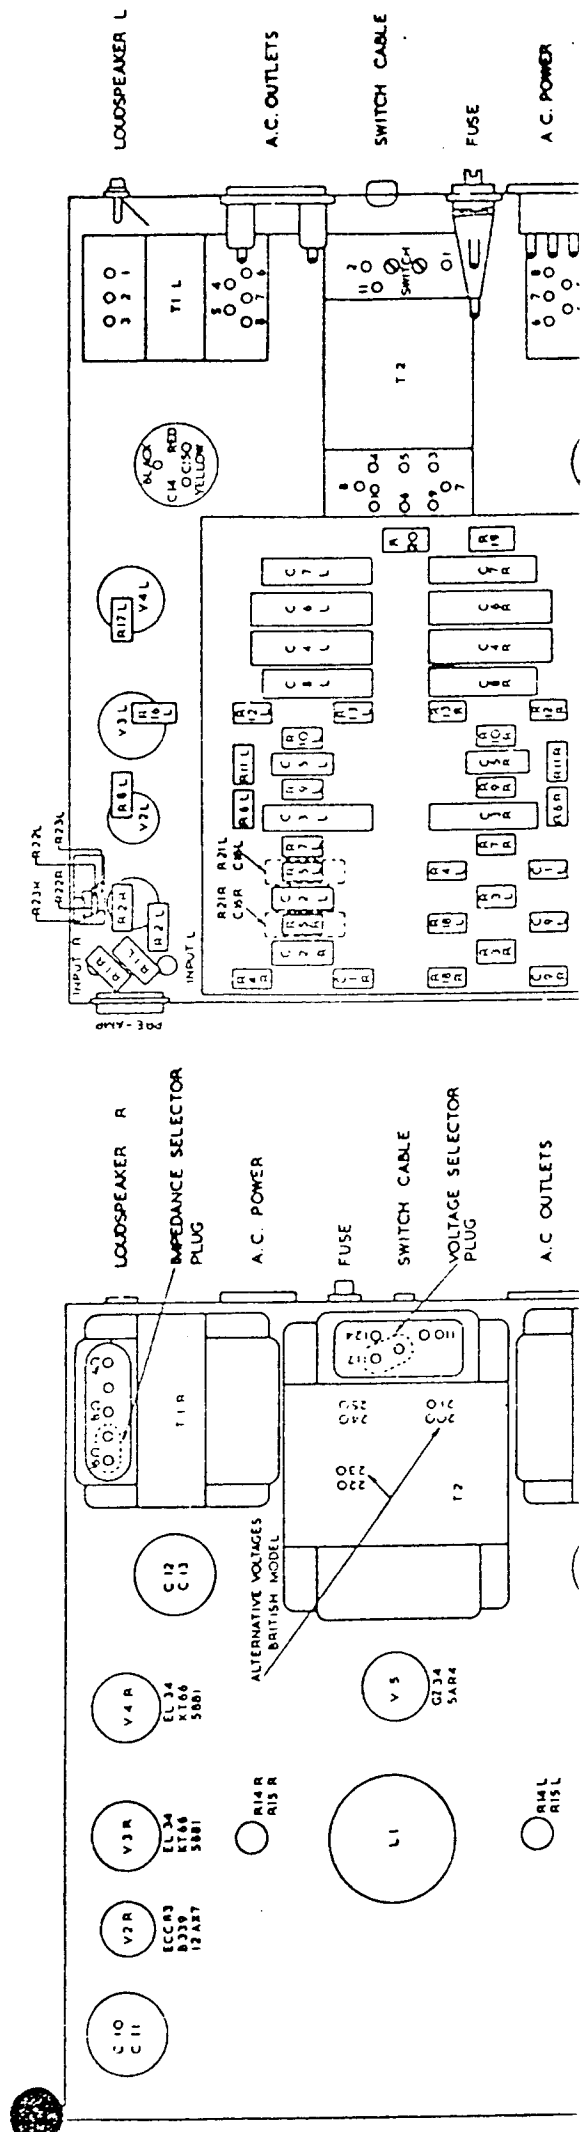

CIRCUIT DIAGRAM OF LEAK 'STEREO 60' POWER AMPLIFIER

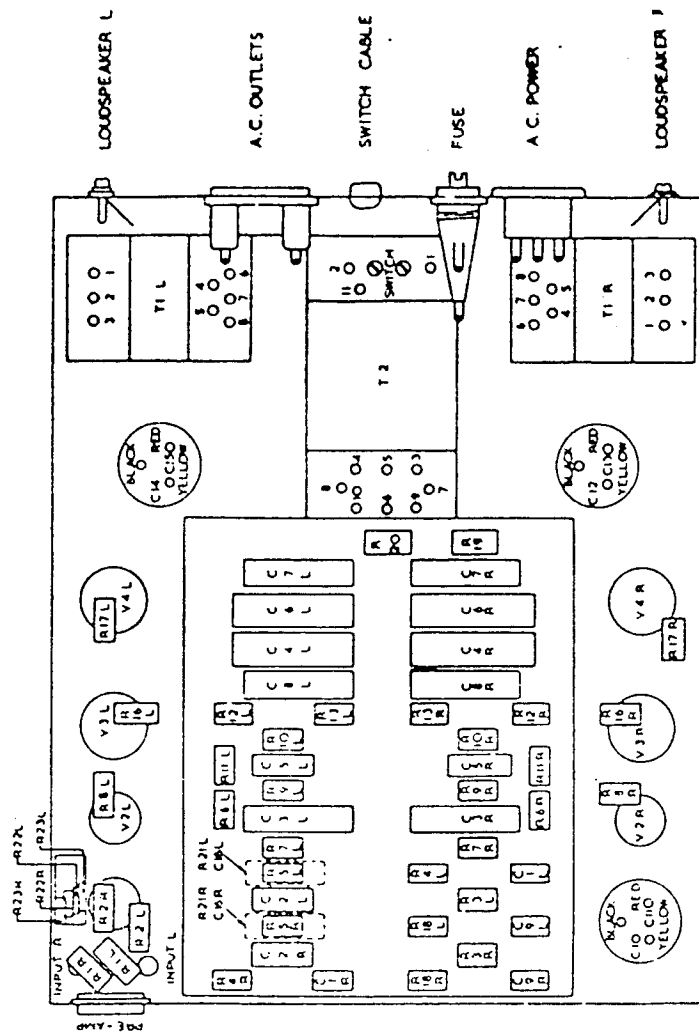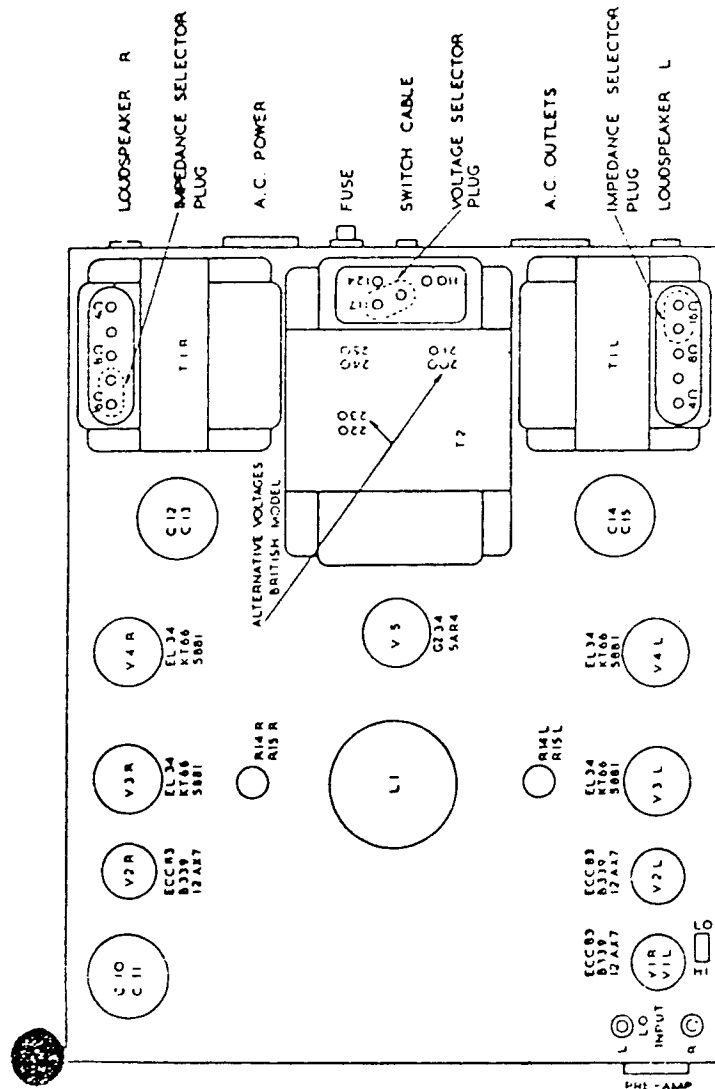

TOP CHASSIS

UNDER CHASSIS

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel: 01844-351694 Fax: 01844-352554
 Email: enquiries@mauriton.co.uk

