


AUDIO SECTION

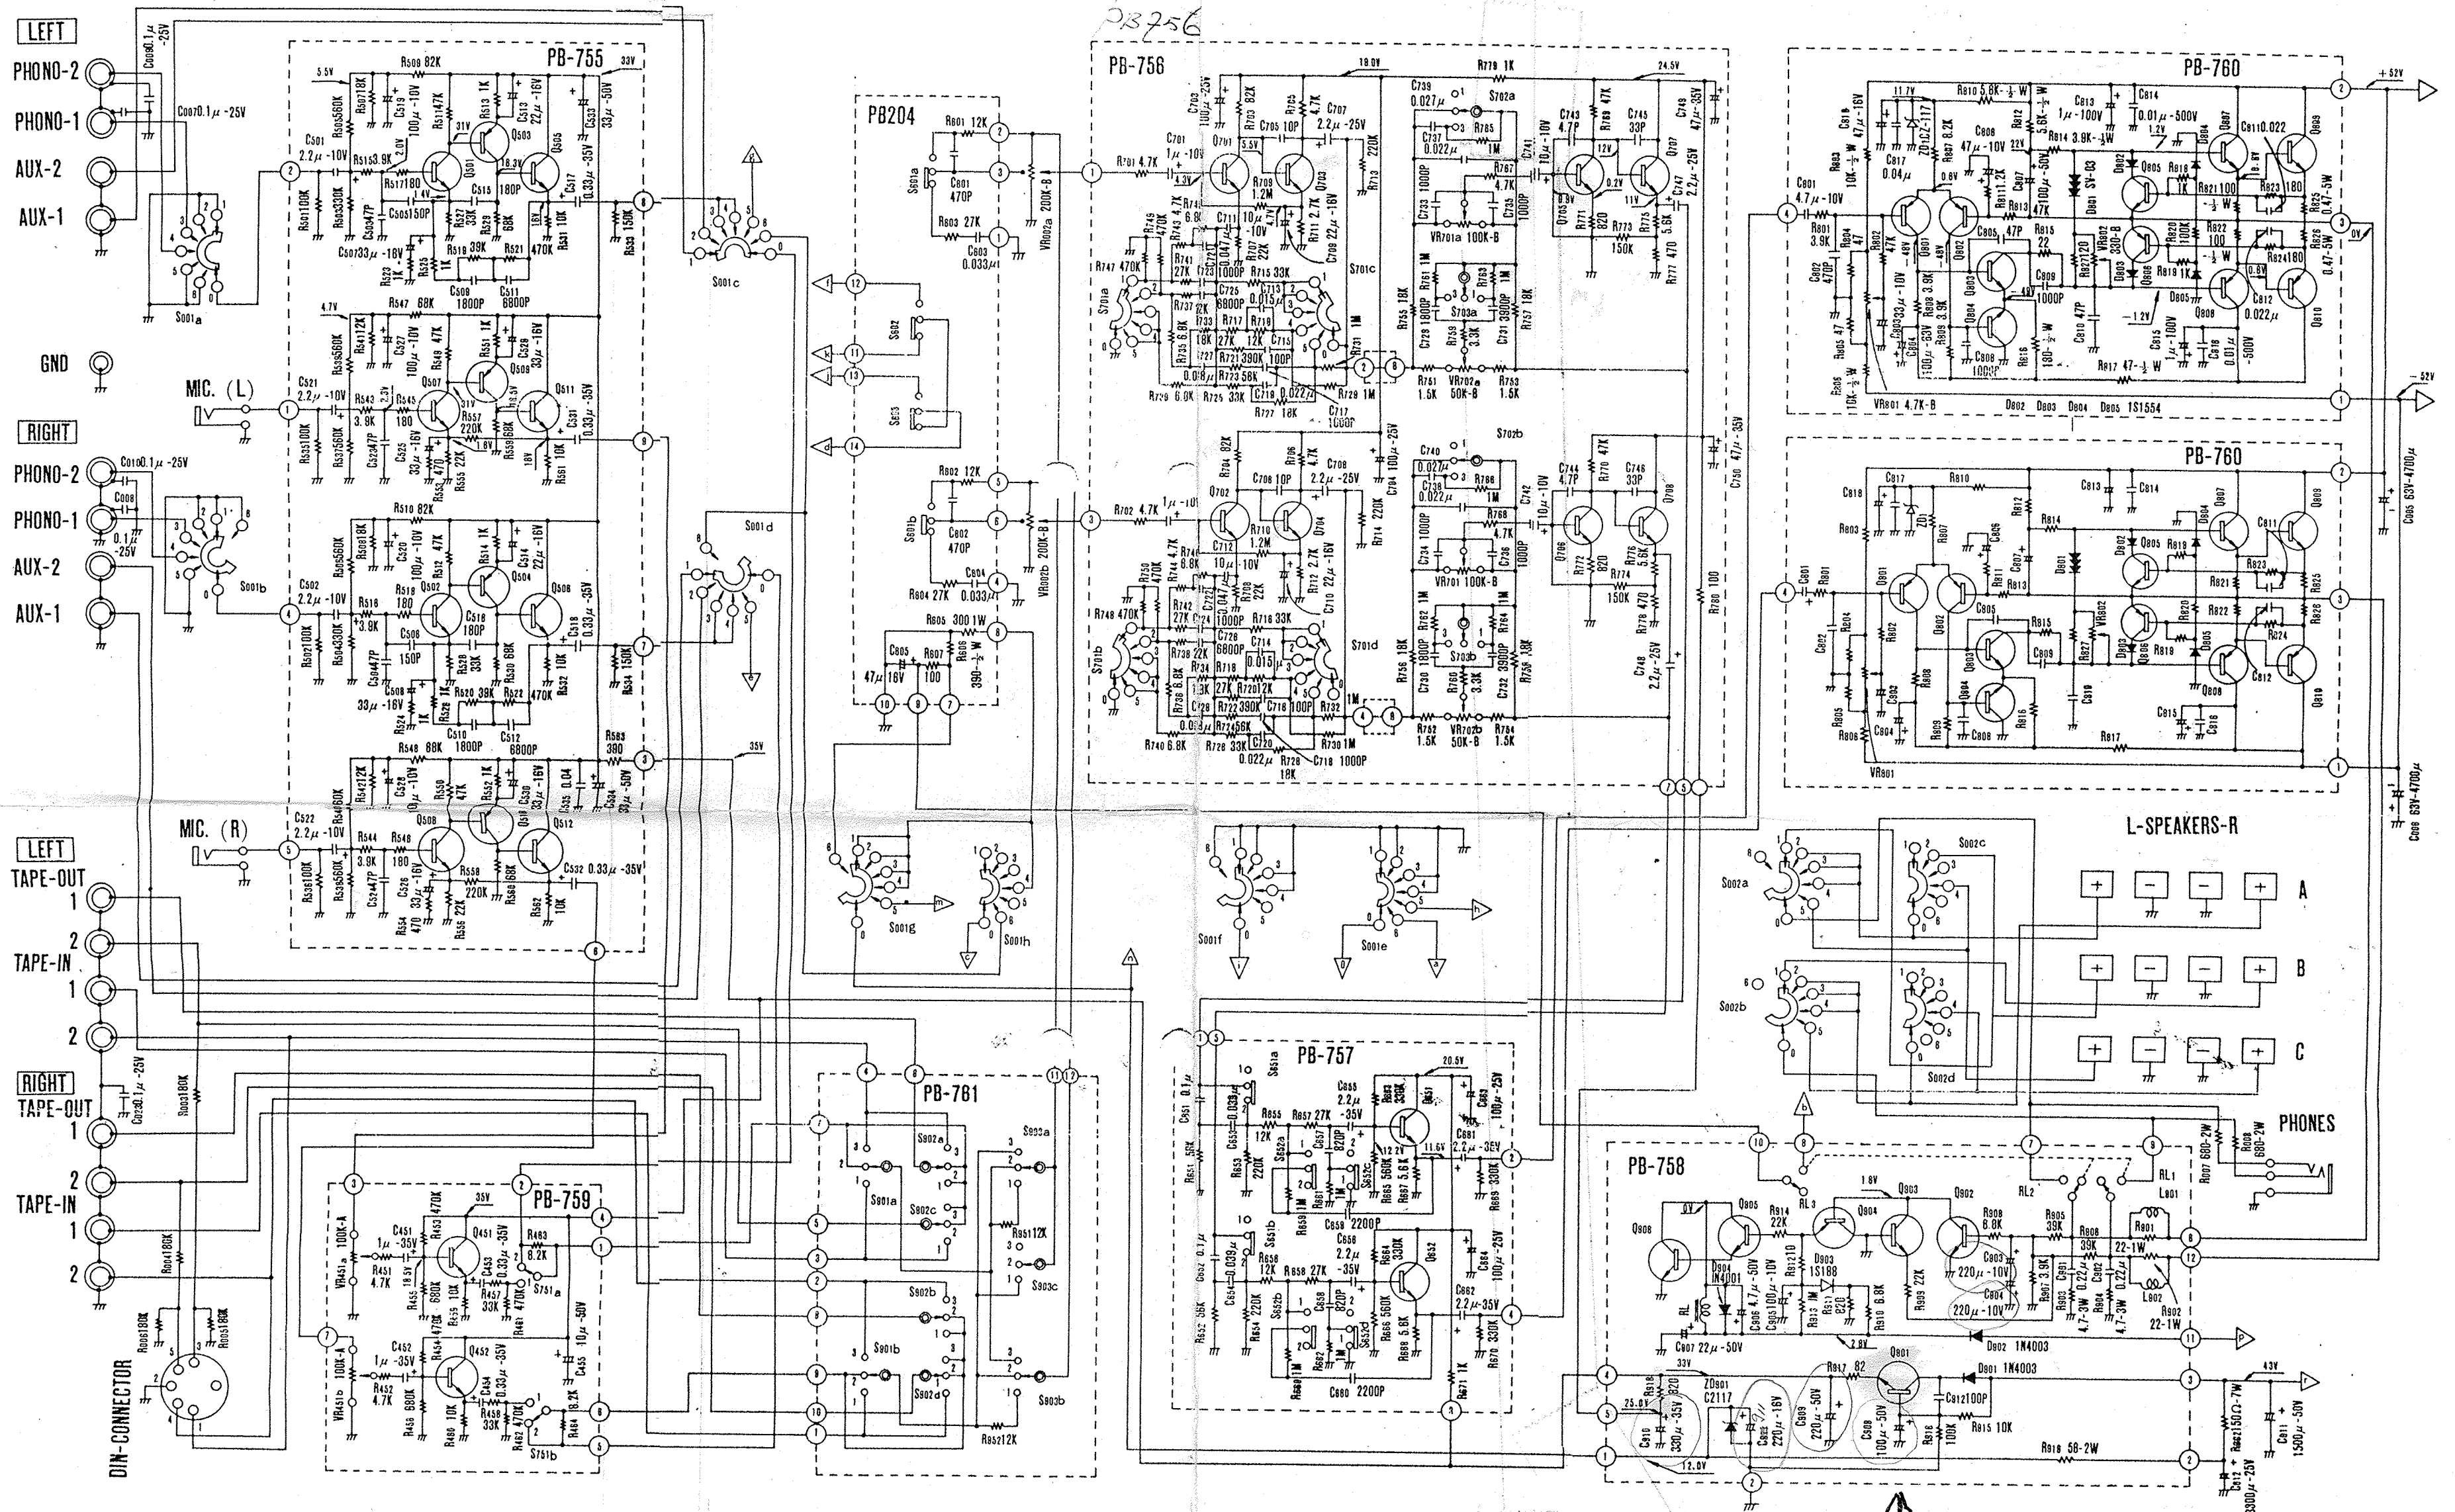

- SWITCH**
- | | | |
|--------------|-------------|--|
| S001a - 001b | FUNCTION | ① AUX-1, ② AUX-2, ③ PHONO-1
④ PHONO-2, ⑤ FM, ⑥ AM |
| S002a - 002d | SPEAKERS | ① B, ② A+B, ③ A, ④ A+C,
⑤ C, ⑥ OFF |
| S003a S003b | LOUDNESS | ① ON, ② OFF |
| S002 | MUTING | ① ON, ② OFF |
| S003 | STEREO ONLY | ① ON, ② OFF |
| S701a S701b | MC MIXING | ① ON, ② OFF |

- LINEAR-EQUALIZER**
- | | |
|--------------------|--------------------------------------|
| S701a - S701d | ① & ② up-tit, ③ FLAT, ④ & ④ down-tit |
| S702a, S702b | BASS |
| S703a, S703b | TREBLE |
| S001a, S001b | LOW-CUT |
| S002a - 002d | HIGH-CUT |
| S001a, S001b | MONITOR |
| S002a, 002b, S002c | DUBING |
| S002a, S002b | MODE |

- VOLUME**
- | | |
|-------------|-------------------|
| VR002-VR003 | VOLUME CONTROL |
| VR101-VR102 | BASS CONTROL |
| VR202-VR203 | TREBLE CONTROL |
| VR451-VR452 | MC-MIXING CONTROL |

- TRANSISTOR**
- | | |
|------------------------------------|----------|
| Q451, Q452, Q501, Q502, Q505, Q506 | 2SC1345 |
| Q507, Q508, Q511, Q512, Q701 - 708 | 2SC1079 |
| Q509, Q504, Q506, Q510 | 2SA640 |
| Q001, Q002 | 2SA620 |
| Q003, Q004 | 2SC1103A |
| Q005, Q002, Q003, Q008 | 2SC945 |
| Q006, Q004 | 2SA733 |
| Q007 | 2SC1431 |

- DIODE**
- | | |
|------------|---------|
| Q008 | 2SA762 |
| Q009 | 2SC1079 |
| Q010 | 2SA679 |
| Q001, Q005 | 2SC1382 |

*soldeer punier
geed controller!*

R1500 AUDIO SECTION