


HiFi ENGINE[®]

For more Hi-Fi manuals and set-up information
please visit www.hifiengine.com



Voltages shown are measured to ground by using a VTVM at no signal.
 Voltage in () are measured by imV input signal in FM STEREO mode.

MODEL 2240B NOTE: This schematic diagram applied to units manufactured for the U.S.A. market. **Fig. 35 Schematic Diagram**