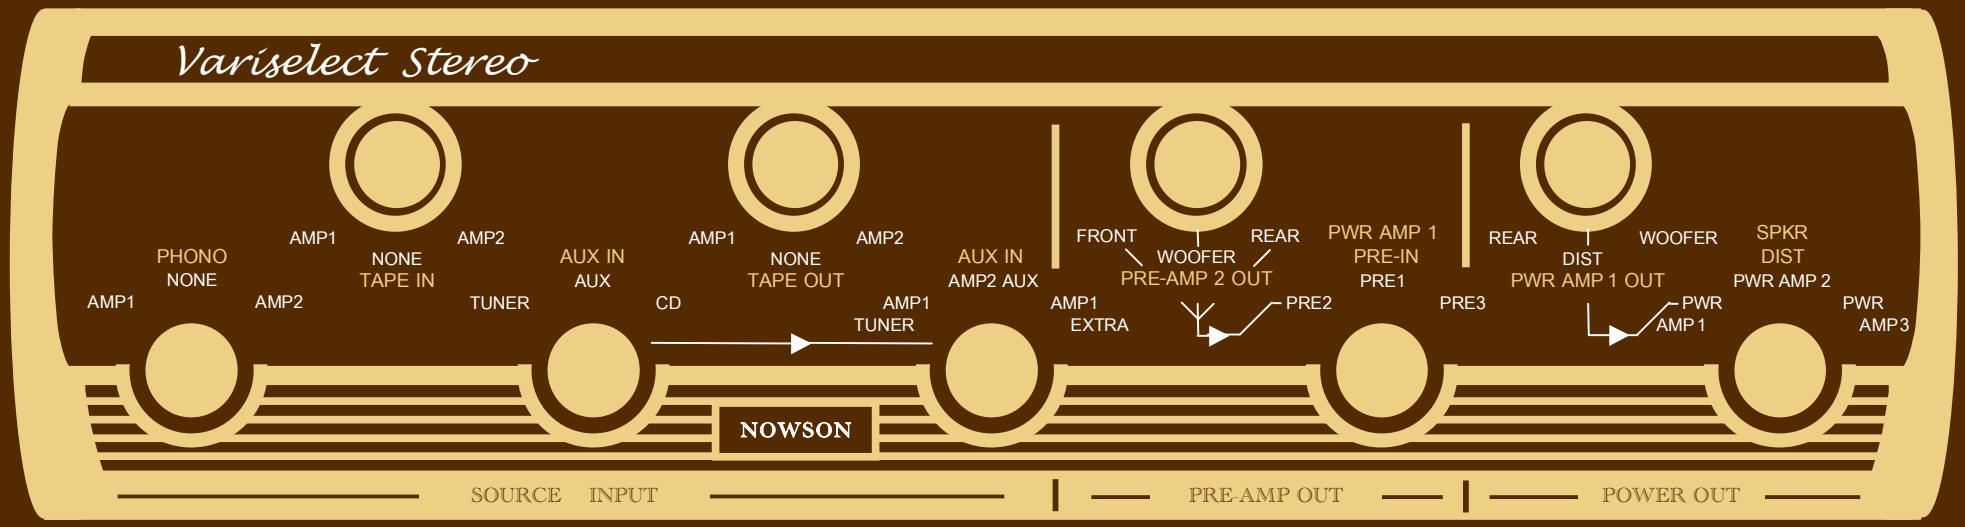
Variselect Stereo
PHONO
NONE
AMP1
AMP2
AMP1
NONE
TAPE IN
AMP2
TUNER
AUX IN
AUX
CD
AMP1
NONE
TAPE OUT
AMP2
AMP1
TUNER
AUX IN
AMP2 AUX
AMP1
EXTRA
FRONT
WOOFER
REAR
PRE-AMP 2 OUT
PRE2
PWR AMP 1
PRE-IN
PRE1
PRE3
REAR
DIST
WOOFER
PWR AMP 1 OUT
PWR
AMP 1
SPKR
DIST
PWR AMP 2
PWR
AMP3
NOWSON
SOURCE INPUT
PRE-AMP OUT
POWER OUT

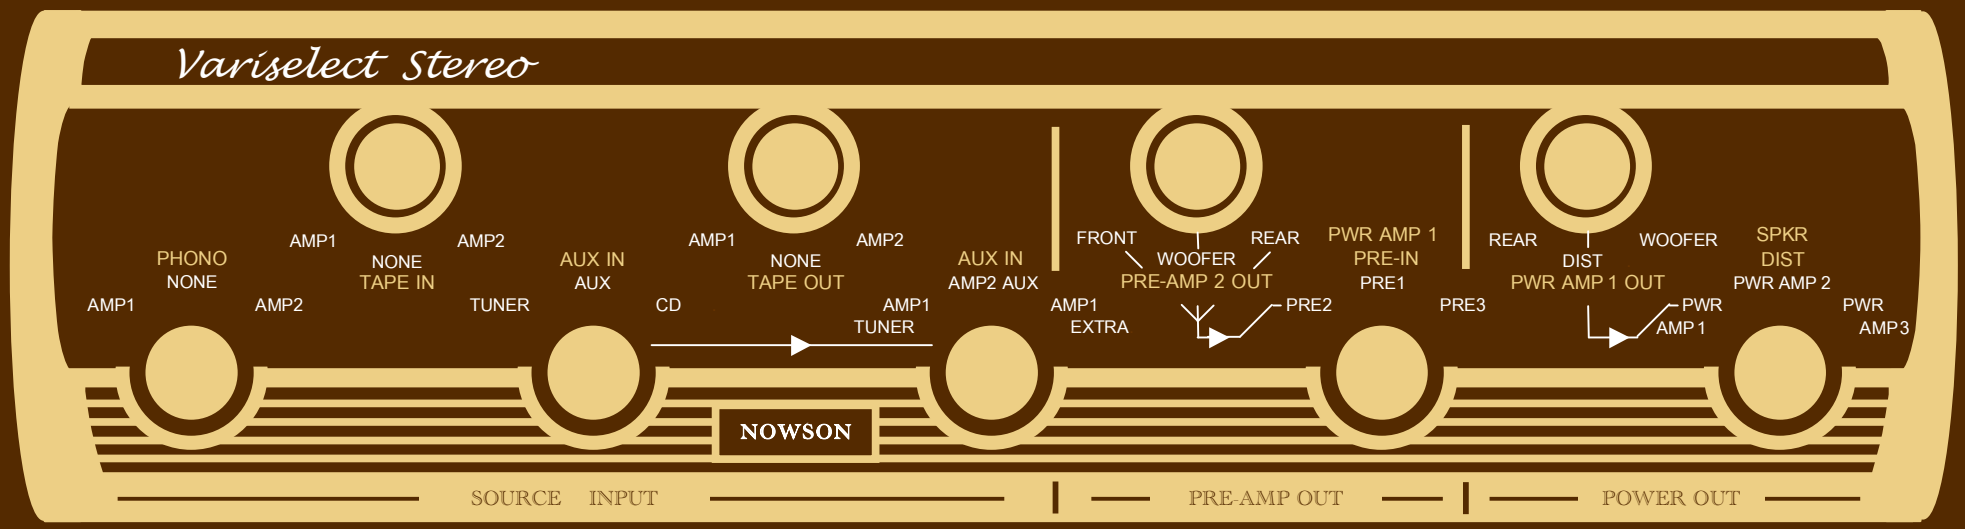
Variselect Stereo
PHONO
NONE
AMP1
AMP2
AMP1
NONE
TAPE IN
AMP2
TUNER
AUX IN
AUX
CD
AMP1
NONE
TAPE OUT
AMP2
AMP1
TUNER
AUX IN
AMP2 AUX
AMP1
EXTRA
FRONT
WOOFER
REAR
PRE-AMP 2 OUT
PRE2
PWR AMP 1
PRE-IN
PRE1
PRE3
REAR
DIST
WOOFER
PWR AMP 1 OUT
PWR
AMP 1
SPKR
DIST
PWR AMP 2
PWR
AMP3
NOWSON
SOURCE INPUT
PRE-AMP OUT
POWER OUT